

# AIR RAID

## INTAKE SYSTEMS

® Installation Instructions  
Part Number 200-180  
2006-07 H3 Hummer 3.5L/3.7L I5

*Note: C.A.R.B. Exemption Status Does Not Apply To The 3.7L Engine*

### Packing List:

#1	700-451	Airaid Premium Filter	1
#2	KIT180FPC	Front Panel Coated	1
#3	KIT180RPC	Rear Panel Coated	1
#4	KITWSTRIP02	Weather Strip 22"	1
	KIT180HP	Hardware & Instructions	1
#5	KIT6C31MXPPZ	6-32x 5/16" Screw	4
#6	KIT6NWSAPZ	#6 Flat Washer	4
#7	KIT6CNKEPZ	6-32 Keps Nut	4

### Tools Required For Installation:


Phillips Head Screwdriver  
5/16" Nutdriver or Socket  
Ratchet and Extension




1. **Disconnect the negative battery cable.**  
Unhook the three clips that hold down the air box lid.



2. Remove the lid by lifting, and sliding it out of the tabs on the side of the airbox.

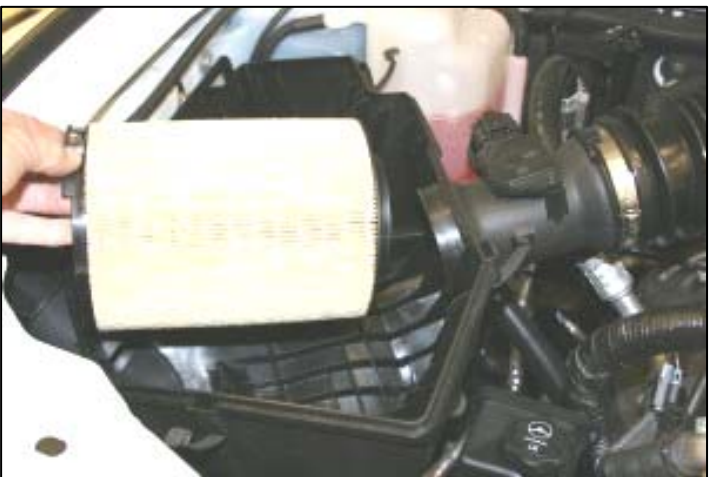

3. Remove the factory air filter from the airbox. Do not remove the factory airbox base. The factory base is required to mount the Airaid Quick Fit Panel.

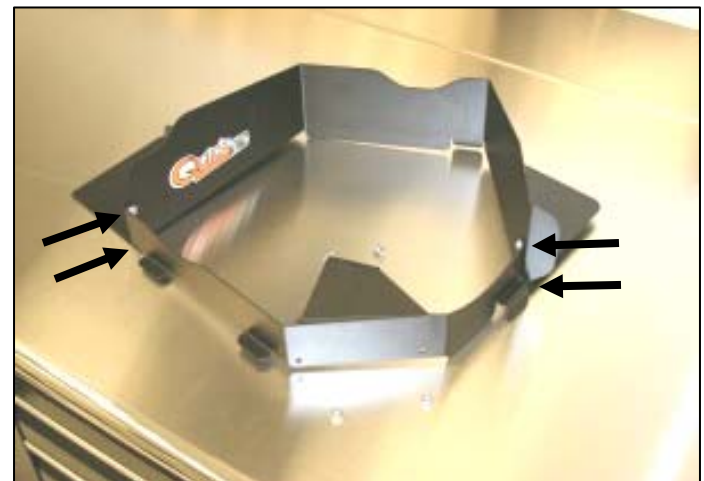

4. Assemble the Airaid Quick Fit Panels (#2, #3) using four 6-32x 5/16" screws (#5), #6 flat washers (#6), and 6-32 keps nuts (#7).



5. Install the Airaid Premium Filter (#1) on the factory intake tube.



6. Make sure the filter and the hose clamp are pushed close to the factory airbox wall, and tighten the hose clamp as shown. **Do Not over tighten.**



7. **A.)** There are two tabs on the Quick Fit Panel, insert the one closest to the headlight first into the slot on the factory airbox.  
**B.)** Next, carefully rotate the Quick Fit Panel counterclockwise until the factory clips line up with the tabs on the Quick Fit Panel. Make sure the filter tab retains the Airaid Premium Filter. Using the factory clips, lock down the Quick Fit panel to the factory filter base.



8. Starting at one end of the Quick Fit Panel, install the weather strip (#4) as shown.


### 9. Double check your work!

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight.

### 10. Reconnect the negative battery cable!

Included with your Airaid Intake System is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

*Before!*

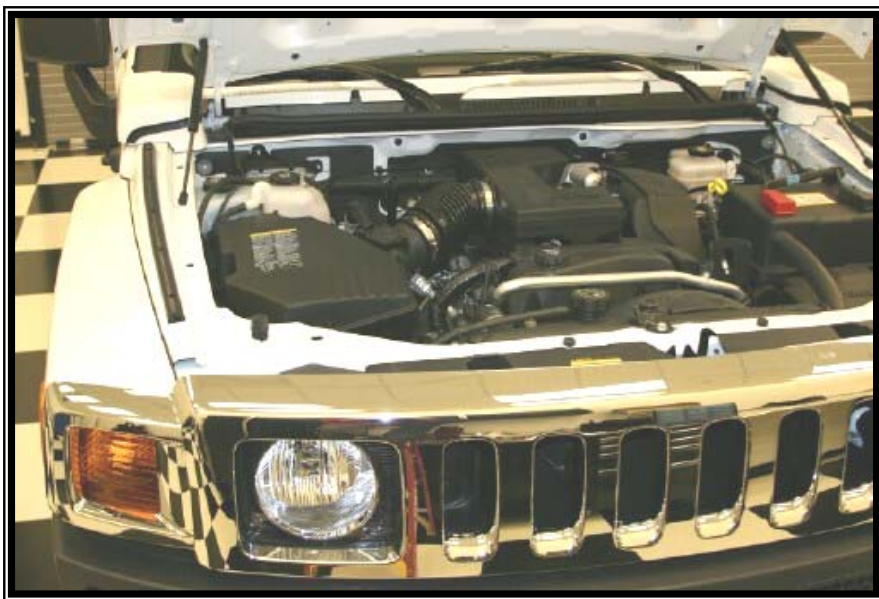

*After!*



Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

## Don't Forget Your AIRAID Filter Tune-Up Kit!



P/N 790-551 Aerosol Spray  
P/N 790-550 Squeeze Spray

Instructions Revision  
Date: 02/07/07