

# AIRRAID®

## INTAKE SYSTEMS

### #300-106 INSTALLATION INSTRUCTIONS

#### 1994-2001 Dodge 3.9, 5.2, 5.9L

**(Will not work in combination with Poweraid #300-560 on the 3.9L)**

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

*Thank you for selecting Airaid.*



#### **Packing List:**

700-420	Airaid Premium Filter	1
300-100	Plastic "Hat"	1
KIT106TAC	13" x 3.5" Tube	1
KITP300	3.5" x 3.5" Coupler	1
KIT106HP-	Hardware Pack	1
- KIT106B	Silver Bracket	1
- KITSNP16M4	Black Speed Clamp	1
- KITSRAM	Bent Black Stud	1
- KIT106CAP	Black Rubber Cap	1
- KIT104G	Gasket	1

#### **Packing List (cont'd):**

- KIT25CNWING	Wing Nut	1
- KIT31CNNEH	5/16"-18 Nut	1
- KIT1420WZZF	1/4" Serrated Nut	1
- KIT31C75HCS5	5/16"-18x 3/4" Bolt	1

#### **Tools Required for this Installation:**

Flat Head Screwdriver
Ratchet Wrench w/6" Extension
1/2" Deep Socket
Pliers

# ***Installation Instructions. Read Me!***

## **I DISCONNECT NEGATIVE (-) BATTERY CABLE**

## **II Remove Factory Intake Assembly**

- a) Disconnect the factory air tube from fender to the stock air cleaner box.
- b) Loosen the clamp at the base of the factory air cleaner box using a flat blade screwdriver. **See Fig#1**
- c) Disconnect the crankcase breather hose from the factory air cleaner assembly.
- d) Remove entire factory air cleaner assembly from vehicle.

## **III Install the Airaid Throttle Body Stud**

- a) Screw the “S” shaped threaded stud into the top of the throttle body. **See Fig#2**

## **IV Mount the Airaid Intake System Brace**

- a) Locate & remove nut from exhaust manifold stud (not a bolt) with a ½” socket - leave the washer in place. **See Fig#3**
- b) Position the brace so that the offset hole on the brace is bolted to the stud on the exhaust manifold.
- c) Reinstall nut onto the stud and temporarily finger tighten.

## **V Assemble the Airaid Intake System (Refer to Fig#5)**

- a) Slide the stainless steel clamp with rubber insert over the opening of the Airaid hat.
- b) Insert the powder coated Airaid tube into the stainless steel coupler, connecting the tube to the hat.
- c) Slip the Airaid Premium Filter onto the open end of the tube and tighten hose clamp.

## **VI Airaid Intake System Installation**

- a) Pull away the weather seal on the firewall above the throttle body to expose the main wire loom. You may have to gently move the wire loom to allow clearance for the Airaid hat.
- b) Place the gasket on the top of the throttle body. **Refer to Fig#2**
- c) Rotate the “S” stud facing forward to allow clearance for the Airaid hat. **See Fig#2**
- d) Position Airaid Intake System and guide the “S” stud through the hole in the top of the hat. **See Fig#4**
- e) After sliding the hat over the “S” stud, rotate the stud 180\* so that the hat rests squarely over the throttle body and install the wing nut supplied onto the top of the “S” stud.
- f) Connect the crankcase breather hose to the nipple on the hat and clamp down using the black speed clamp provided.
- g) Install the rubber cap over the exposed nipple on the other side of the hat.
- h) Align the tab on the tube with the end of the bracket attached to the exhaust manifold and fasten with the hardware provided.
- i) **IMPORTANT: DO NOT ALLOW MAIN WIRE LOOM TO REST ON THE HAT OR WINGNUT. SECURE THE LOOM SO THAT IT DOES NOT CHAFE ANYWHERE.**

## **VII Finishing Up**

- a) Tighten all clamps, brackets, nuts & bolts.
- b) Inspect overall work and check hood clearance.
- c) Ensure that no foreign objects are in the intake path!
- d) Re-connect negative battery cable.

**WARNING! DO NOT ALLOW MAIN WIRE LOOM TO REST ON HAT. SECURE SO THAT IT DOES NOT CHAFE!**



# References

**FIG#1**




**FIG#2**




**FIG#3**



**FIG#4**

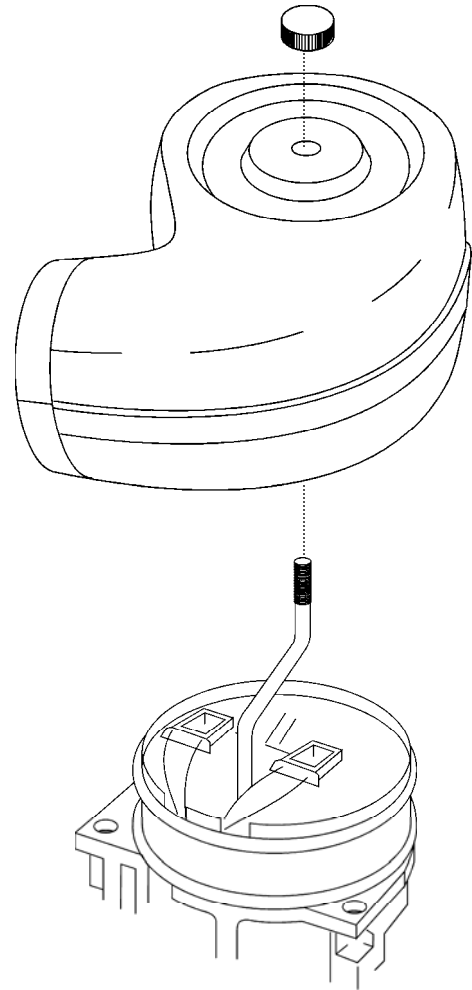

**FIG#5**

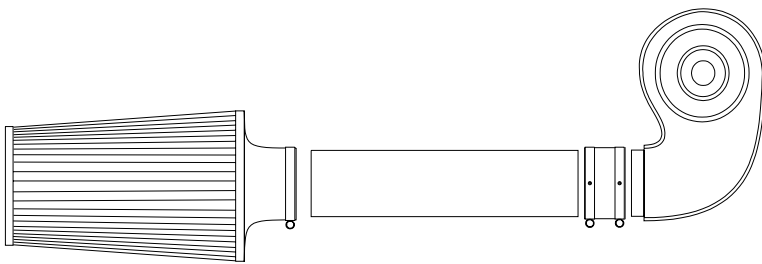

Also available for this application is the Poweraid® Throttle Body Spacer for improved low end torque! Part # 300-560

# Don't Forget Your AIRAID Filter Tune-Up Kit!



**P/N 790-550**

*Before*

*After!*



Instructions  
Revision Date:  
04/03/09

## VEHICLE WARRANTY INFORMATION

Airaid Intakes and Filters will NOT void your vehicle's warranty. The federal Magnuson-Moss Warranty Act of 1975 states that the manufacturer can't void a vehicle's warranty because an aftermarket part is used. This is called a tie-in sale. Which means a manufacturer can't require the use of a certain brand of product. The only exception to this is the condition they provide the product for free. For assistance or more information the Federal Trade Commission can be contacted at 1-877-FTC-HELP (1-877-382.4357).