

AIR AID[®]

INTAKE SYSTEMS

300-150 INSTALLATION INSTRUCTIONS

03-05 Dodge Ram 5.7L Hemi

NOTE: DOES NOT FIT 2006 AND NEWER DODGE RAM

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

Thank you for selecting Airaid.



Packing List:

700-445	Airaid Premium Filter	1
KIT125-IDC	Cool Air Dam	1
KITWSTRIP02	Weather Strip 33 1/4"	1
KIT924T	Modular Intake Tube	1
KITHUMPHS01	Urethane Hump Hose	1
KITCOUPLER03	Urethane Coupler	1
KIT150HP	Hardware & instructions	1
-KITSNP16M4	#16 Speed Clamp	2
-KITSNP19M4	#19 Speed Clamp	1
-KITSNP22M4	#22 Speed Clamp	2
-KITSNP24GHS	#24 Speed Clamp	1

Packing List (cont'd):

-KIT125-1CAP	Black Rubber Cap Large	1
-KIT106CAP	Black Rubber Cap Small	1
-KITHS60	#60 Hose Clamp	4
-KITGRMT02	Rubber Grommet	1
-KITHOSE01	1/2' x 4 1/2' Hose	1
-KITFITTING03	Black Connector Fitting	1

Tools Required for this Installation:

Flat Head Screwdriver
10mm Deep Socket

Installation Instructions. Read Me!



1. Disconnect the negative battery cable, and remove the factory “accordion” style intake hose by loosening the two factory clamps.




2. Loosen the two 10mm bolts securing the factory resonator to the intake manifold.



3. Disconnect the air temperature sensor connector on the front of the factory resonator. Next, twist the temperature sensor and remove it from the factory intake resonator. (Retain for later use with Airaid intake).



4. 2003 Models: Disconnect & remove the crankcase vent hose from the front of the factory resonator.

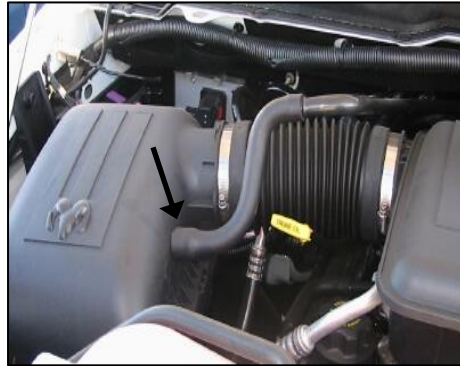

5. 2004-05 Models: disconnect breather hose from factory air box lid.



6. Remove the factory resonator and rubber seal from throttle body.




7. Unclip & remove the factory air box lid and factory air filter.



8. Position the Airaid Cool Air Dam in place of the original air box lid. Snap in place.



9. Mount the Airaid Premium filter inside the Cool Air Dam & secure with hose clamp provided.

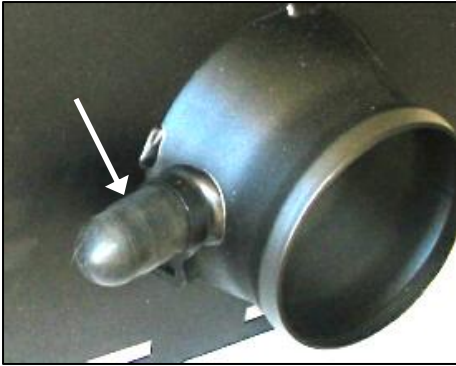

10. **2003 Models Only:** Slip the black rubber cap over the nipple on the Cool Air Dam and secure using the #19 black speed clamp provided.



11. **2004-05 Models Only:** Mount factory breather hose to the nipple on the Cool Air Dam and secure using the #24 black speed clamp provided.



12. Install the rubber grommet into the hole on the front side of the Airaid tube & insert the factory air temp sensor into grommet.



13. Install the urethane hump hose on the long end of the Airaid tube using two of the #60 hose clamps provided. Leave loose for final assembly.



14. Slide the urethane coupler onto the throttle body and secure using a #60 hose clamp provided & install the 2nd #60 hose clamp on the other end of the coupler, leave loose for final assembly.




15. Slide the Airaid tube with hump hose into the Airaid Cool Air Dam first, and then slide the other end into the throttle body coupler. *(Note: The Airaid tube should be flush against throttle body*

with a gap between the tube and Cool Air Dam assembly for engine movement.) After inspection, adjust the Airaid tube, coupler, and hump hose and tighten all hose clamps



16. Re-connect air temperature sensor connector on the front of the tube.

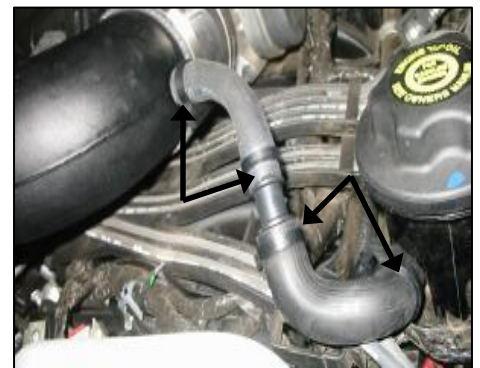

17. **2003 Models Only:** Use the plastic barbed fitting and 1/2" hose provided; connect factory vent hose to Airaid intake tube & secure the 1/2" hose with (2) #16 black speed clamps provided. Secure factory vent hose with (2) #22 black speed clamps provided.

Continued on next page...





18. **2004-05 Models Only:** Slide the black rubber cap over the nipple near the throttle body end of the Airaid Tube.



19. Install weather strip along the top rim of the Airaid Intake System. (*Hint: start the install*

at the top corner of the cold air dam)

- 20. Check for any foreign objects or debris in the intake path.
- 21. Double check your work to be certain that all nuts, bolts, and clamps are securely fastened.
- 22. Reconnect the negative battery cable.



Included with your Airaid Intake System is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

Before

After!



**Don't Forget Your
AIRAID Filter
Tune-Up Kit!**

P/N 790-550



Instructions Revision
Date: 05/07/08